


## Assembly diagram of BLISTER - Sandbettmatten

### Prerequisites for the installation of the product:

- Depth of the cubicle at the rear curb about 20 cm, depth of the front curb about 16 cm
- 6 cm concrete as bottom of the cubicle for maximum grip of screws

### Subsequently after the product installation:

- Use dirty and damp sand for filling the Blister - Sandbettmatten
- Sprinkle spelt pellet, straw pellet, chopped straw, saw dust, sand etc. all over the surface of the Blister - Sandbettmatten


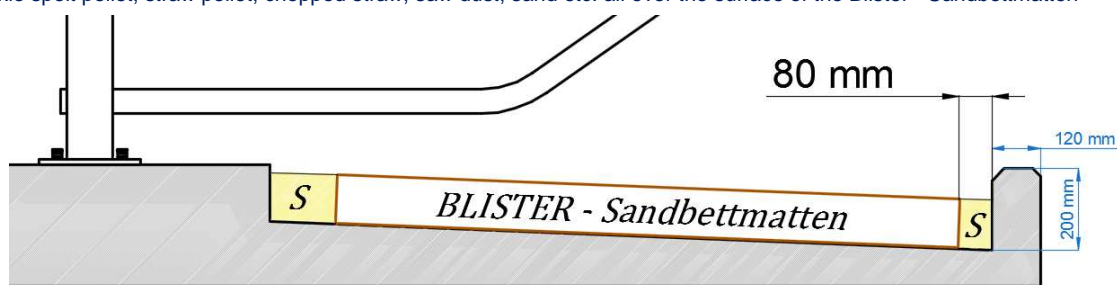


S= Sand

### **Important:**

where possible, install BLISTER – Sandbettmatten mattresses in adherence to one another inside the cubicle starting from the first wall of the cubicle.

For the installation of BLISTER – Sandbettmatten use the 13 expansion screws supplied with the product in the appropriate 13 holes

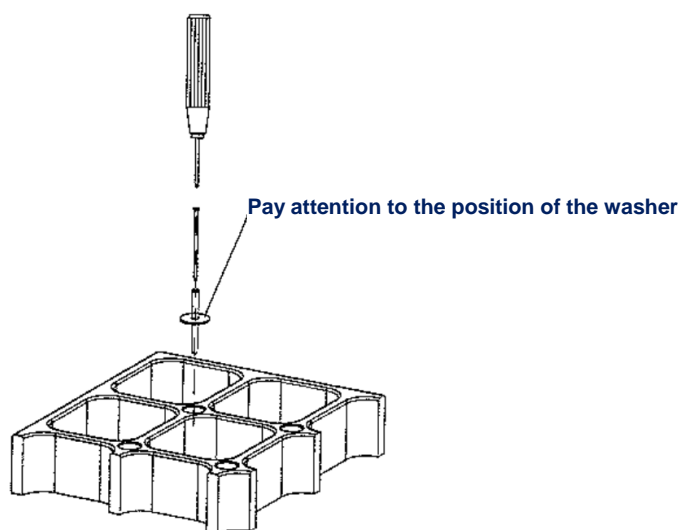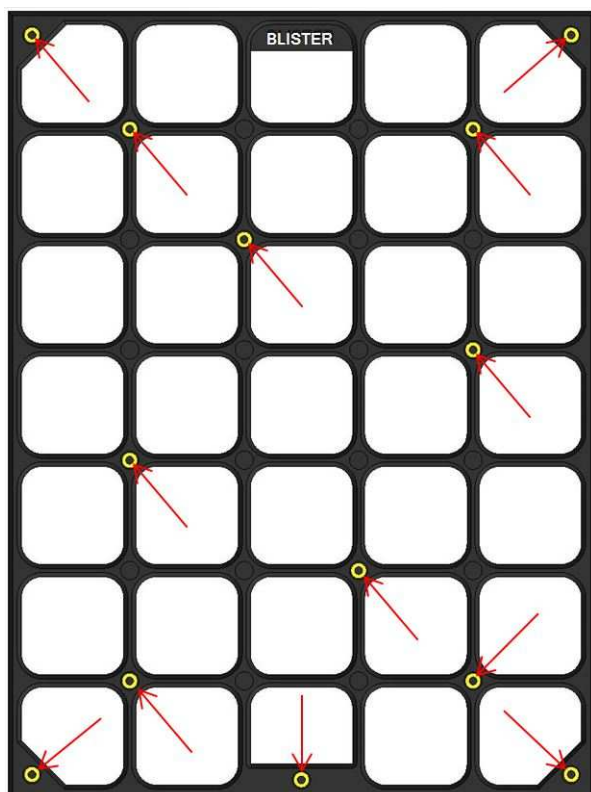

### Attention:

Before proceeding with the installation of the subsequent piece, make sure the one you just installed is properly secured to the bottom of the cubicle by means of 13 expansion screws supplied with the product.

